



Sylvi

RACE WITH TIME



Analog

Watch Instruction Manual

(Sylvi -1118)

Suitable for

 
- Silver Black
- Black
- Blue
- Gray

www.sylvi.in

Index

No.	Subject	Page
1.	Brief Introduction	03
2.	Operation Guide	04
	•How to set Time	04
	•How to set Date	04
3.	Strap Instructions	04
4.	Water Resistant	05
5.	Warranty Instrucions	06
6.	Claim Warranty	07
7.	Contact Us	07

Brief Introduction

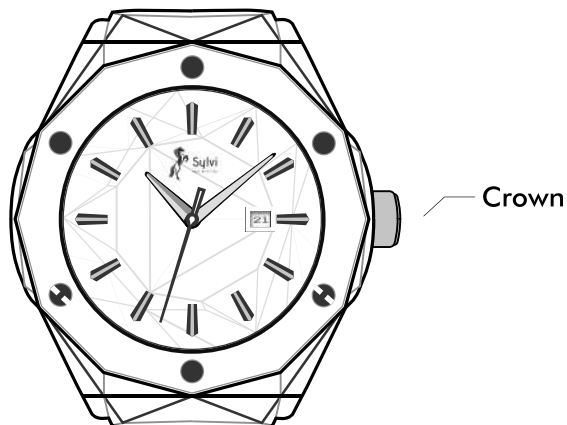

• Watch Dial

- Diameter : 32mm

• Watch Case

- Hight : 54mm
- Diameter : 45mm
- Thickness : 12mm

• Strap

- Width : 24mm
- Thickness: 3.19mm

A Light Button

B Mode Change

C Reset Button

D Start/Stop Button

 
Water Resistant

3 ATM

Operation Instructions


• How to Set Date & Time :-

1. Pull out the crown to position B.
2. Turn crown either way to correct date.
3. Fix your correct date & Again pull out the crown to position C.
4. Turn crown either way to correct time.
5. Fix your correct time.
6. Push in the crown to the position A (Normal).

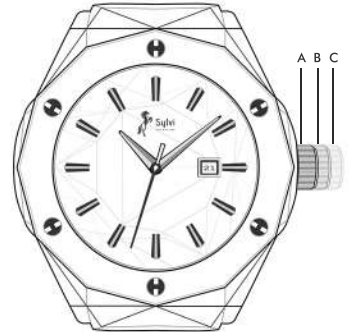


• Strap Instruction :-

 1 >

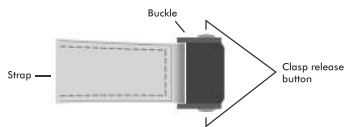


- Push the 2(Two) clasp release buttons on either of the buckle to release the clasp

 2 >

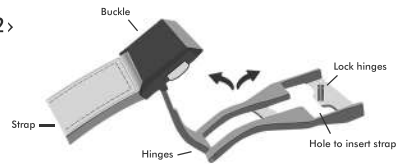


- The buckle will release and the hinges will open in an outward motion

 3 >

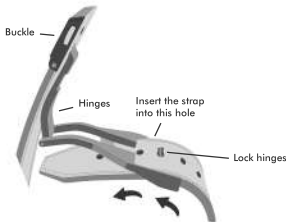

- Insert your back strap through the hole in the open hinges and set the strap into the lock hinges

 4 >

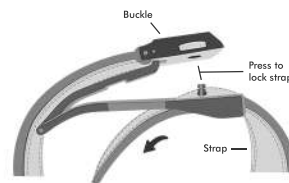

- Once the strap is set into the lock hinges, press the buckle and hinges with one thumb and one finger. Now the watch will be set on your wrist

Note: Do not operate the watch inside water.





• Water Resistant

If you want to know information about water-resistant rating for Sport, casual chronograph, and slim, please refer to page no 3.

The water resistant rating provides guidelines for appropriate water-related exposure to avoid damage to internal watch components. Please see the chart for recommended usage guidelines.

To ensure water does not enter the watch and cause damage to it, please follow the instructions listed below:

- Do not adjust the crown while the timepiece is in contact with water.
- Ensure the crown is in the closed position before contact with water. For timepieces with screw-down crowns, ensure the crown is completely tightened before contact with water.
- For timepieces with pusher-enabled functionality, do not engage the function underwater.
- Exposure to the extreme atmosphere is not recommended (i.e. hot water, saunas, or steam rooms).
- Avoid exposure to water moving with force (i.e. water running from a faucet, ocean waves, or waterfalls).
- Avoid long exposure to saltwater. After contact with salt water, rinse the watch under tap water if rated 5ATM or higher and wipe dry with a soft cloth.

Recommendations For Water-Related Use				
Indication	 SPLASH RESISTANT (Hand Washing)	 SUBMERSIBLE (Swimming)	 SHALLOW DIVING (Snorkeling)	 SCUBA DIVING (Not Deep Sea)
None				
3 ATM • 30 Meters	✓			
5 ATM • 50 Meters	✓	✓		
10 ATM • 100 Meters	✓	✓	✓	
20 ATM • 200 Meters	✓	✓	✓	✓

• Warranty Instructions

Your watch is warranted for six (6) months from the original date of purchase under the terms and conditions of the warranty. The warranty covers manufacturing defects, i.e. the watch movement, hands, and dial only. The covered components will be repaired or the watch will be replaced free of component and labor charges if it proves to be defective in material or workmanship under normal use.

- In case of replacement, we cannot guarantee that you will receive the same model watch. If your model is not available, a watch of equal value and similar style will be provided.

This warranty does not cover:

- Any defect in materials and workmanship of battery, case, crystal, button, crown, strap, or bracelet; including plating on the case and/or bracelet.
- Damage resulting from improper handling, lack of care, accidents, normal wear and tear or aging.
- Water damage if care instructions for the product's water resistance levels (as per the product specification) were not followed.
- Products that are not purchased from an authorized retailer.
- This warranty is void if the watch has been damaged by accident, negligence of persons other than authorized sales or service agents, unauthorized service, or other factors not due to defects in materials and workmanship. This warranty is void if the serial number or product date codes or other tracking marks have been removed, altered, or obliterated.

Get Additional Warranty



or

<https://sylvi.in/warranty-registration>

Click Here to Open

• How to Claim Warranty?

Step 1:

Contact customer care and report your problem. An RMA ID will be generated
(Without RMA ID, warranty cannot be claimed)

Step 2:

The product will have to be sent to service center including the following information.

RMA ID - Given by customer care executive

Name

Full address

Daytime contact telephone number

Email address

Where your item was purchased from

Model reference of the item (Found on the back of your watch)

Full description of the work required

A copy of your proof of purchase

• How to reach us?

For any service-related inquiries and feedback, call our number
+919687660234 Monday to Saturday, 10.00 am to 7.00 pm.
(closed on National and Festival holidays).

If you are unhappy for any reason, please mail us at customercare@sylvi.in.
We promise to reply by the next working day.

